Easily Removal

Step 1: Inserts the tool into the front end of the terminal

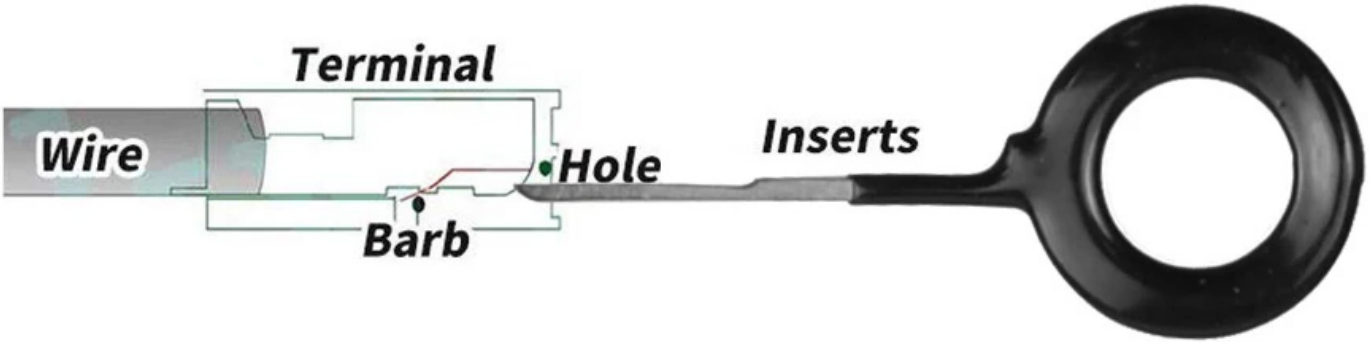

Step 2: Use the removal tool to push forward to unlock the barb and teminal

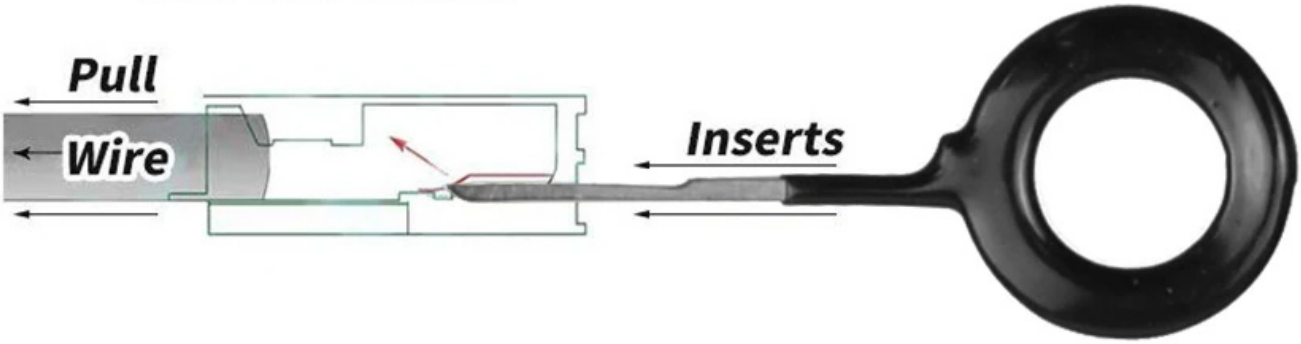
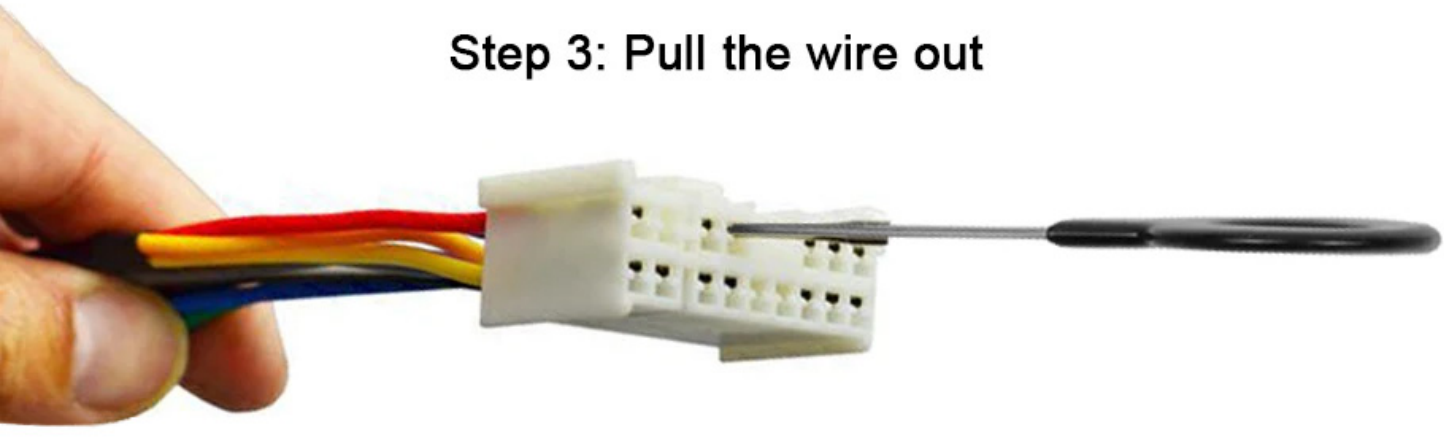
Step 3: Pull the wire out